



CAUTION: Laser radiation, do not stare into beam!

Do not disassemble the OpticalCon® cable connector if not necessary.

The automatic sealing shutter of the OpticalCon® avoids pollution of the inside located LC connectors.

The dust proof design reduces cleaning to a minimum, if nevertheless necessary be aware that improper cleaning can cause damage to the equipment.


1. Wet cleaning using lint-free wipes:

Tools:

- 99% isopropyl alcohol (IPA)
- · Lint-free wipes

The primary concern with using IPA is that it be removed completely from the LC connector.

If the alcohol is allowed to evaporate slowly of the ferrule, it can leave residual material on the fiber core or cladding.

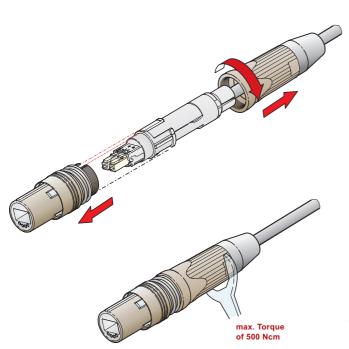

- 1.1. Disconnect both cable ends for safety reasons
 Invisible laser radiation may be emitted from
 disconnected fibers or connectors. Do not stare into
 beams or view directly with optical instruments.
- **1.2.** Untighten the connector bushing and remove carefully the insert of the connector housing.
- **1.3.** Inspect the LC connectors with a fiberscope.
- **1.4.** Fold a lint-free wipe into a square (about 4 to 8 layers thick).
- **1.5.** Moisten one section of the wipe with one drop of 99% alcohol. Be sure that a portion of the wipe remains dry.
- **1.6.** Wipe lightly the ferrule tip in the alcohol moistened portion of the wipe with a figure "8" motion.

 Immediately repeat this wiping action on the dry section

of the wipe to remove any residual alcohol.

- Do not scrub the fiber against the wipe, doing so can cause scratches.
- 1.7. Dispose the wipe, NEVER REUSEAWIPE.
- 1.8. Inspect the connector again with a fiberscope.
- 1.9. Repeat the process if necessary.
- **1.10.** After the cleaning procedure slide the connector insert back into the connector housing.

Align the key on the insert to the cutout of the metal housing.

 $\textbf{1.11.} \ Tighten the bushing with a max. Torque of 500 \, Ncm.$


2. Dry cleaning using FOCD-CLETOP-S-B cleaning device



- 2.1. Follow the instructios A. 1.1. to A. 1.3.
- 2.2. Clean LC connectors according cleaning device instructions
- 2.3. Follow the instructions A. 1.8. to A. 1.11.



B. Chassis connector maintenance

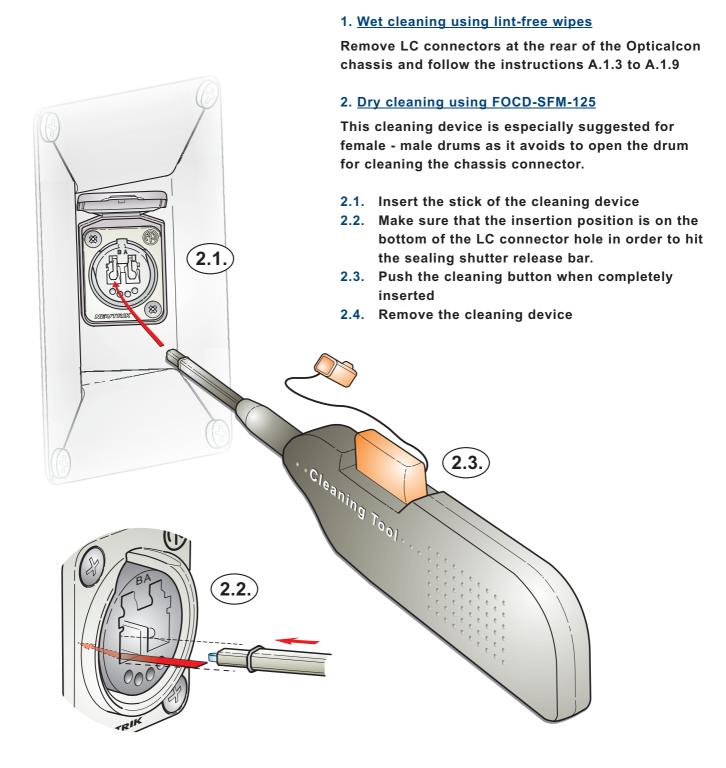

NEUTRIK AG	LI	T: +423/2372424	F: +423/232 53 93	NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131 / 280 830
NEUTRIK Zürich AG	СН	T: +41 44 / 736 5010	F: +41 44 / 736 5011	NEUTRIK France	FR	T: +33 1 / 4131 6750	F: +33 1 / 4131 0511
NEUTRIK USA Inc.	USA	T: +1732/9019488	F: +1732/901 9608	NEUTRIK Tokyo Ltd.	JP	T: +81 3 / 3663 4733	F: +81 3 / 3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983 / 811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852 / 2687 6055	F: +852 / 2687 6052

Draft. Nr.: BDA 172 / 3102M1421 | Update: 24..04.2009 | Data subject to change without prior notice. ©2009 NEUTRIK®. ALL RIGHTS RESERVED.

